FCC WARNINGS

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FEATURES

- 2GB installed flash memory
- USB thumb drive storage
- Supports: MP3 and WMA
- Preset EQ
- LCD display with white lit characters
- ID3 tag compatible
- Stereo headphone jack

INCLUDED

- MW240
- USB cable
- One set of stereo earbuds
- Warranty card
- User’s guide

DISPLAY

SKIP/SEARCH
Press to skip between tracks. Press and hold to search through the current track.

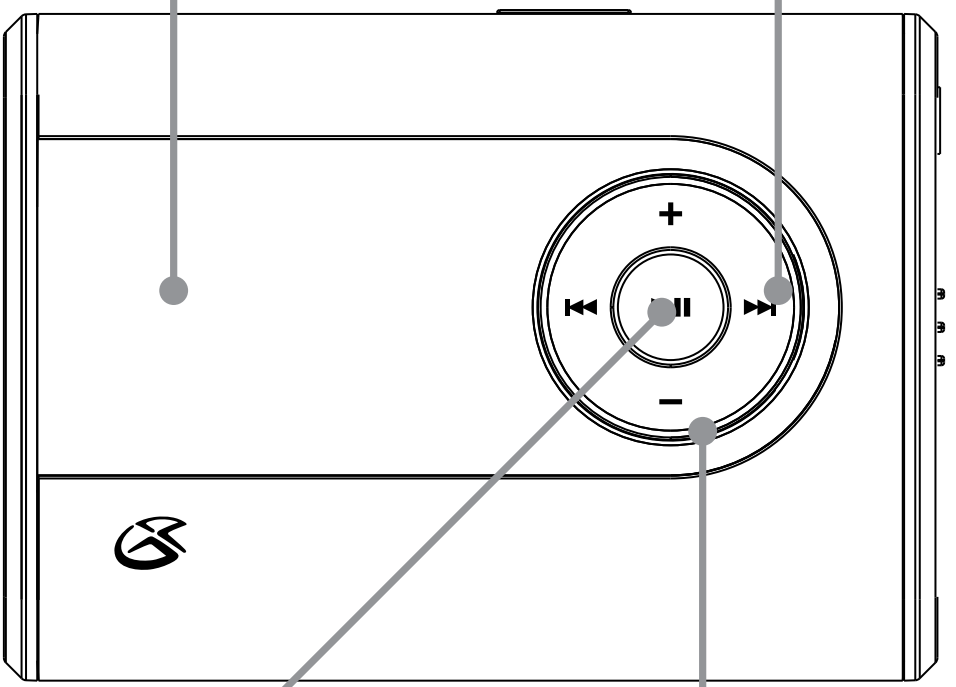

PLAY/PAUSE
Press to play or pause the MP3 player.

VOLUME
Press to adjust the volume.

STEREO HEADPHONE JACK

OFF/ON/HOLD
Adjust to power the MP3 player off or on, or to lock the buttons from being accidentally pressed.

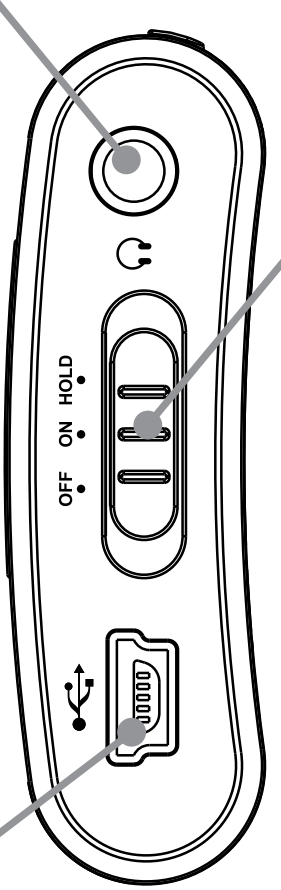

MINI-USB PORT

MODE

Press to switch between NORMAL, REPEAT 1, REPEAT ALL, and RANDOM play modes. In PAUSE mode, press and hold to access the search feature. In PLAY mode, press and hold to cycle through the EQ presets.

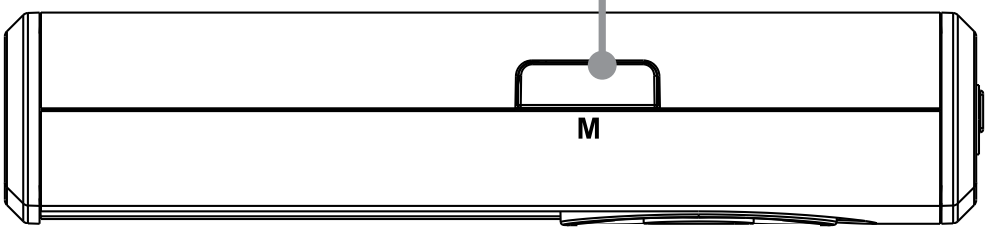

BATTERY COMPARTMENT
Requires 1 AAA battery (not included)

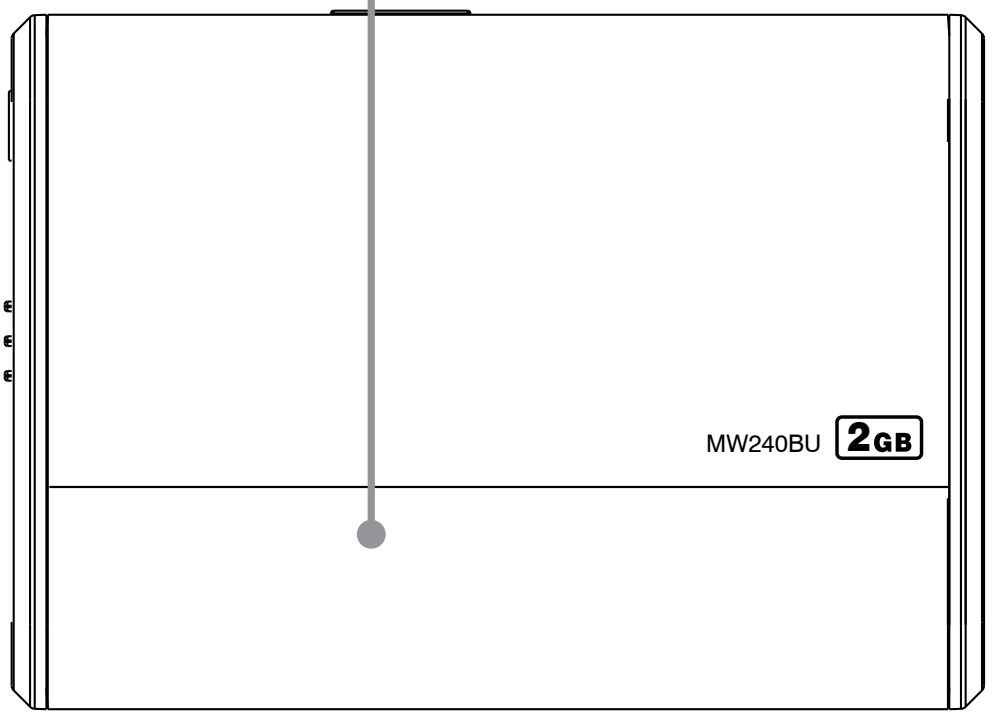

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.gpx.com.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.gpx.com.

Contact Information

Phone: 1-888-999-4215

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

POWER

Requires 1 AAA battery (not included)

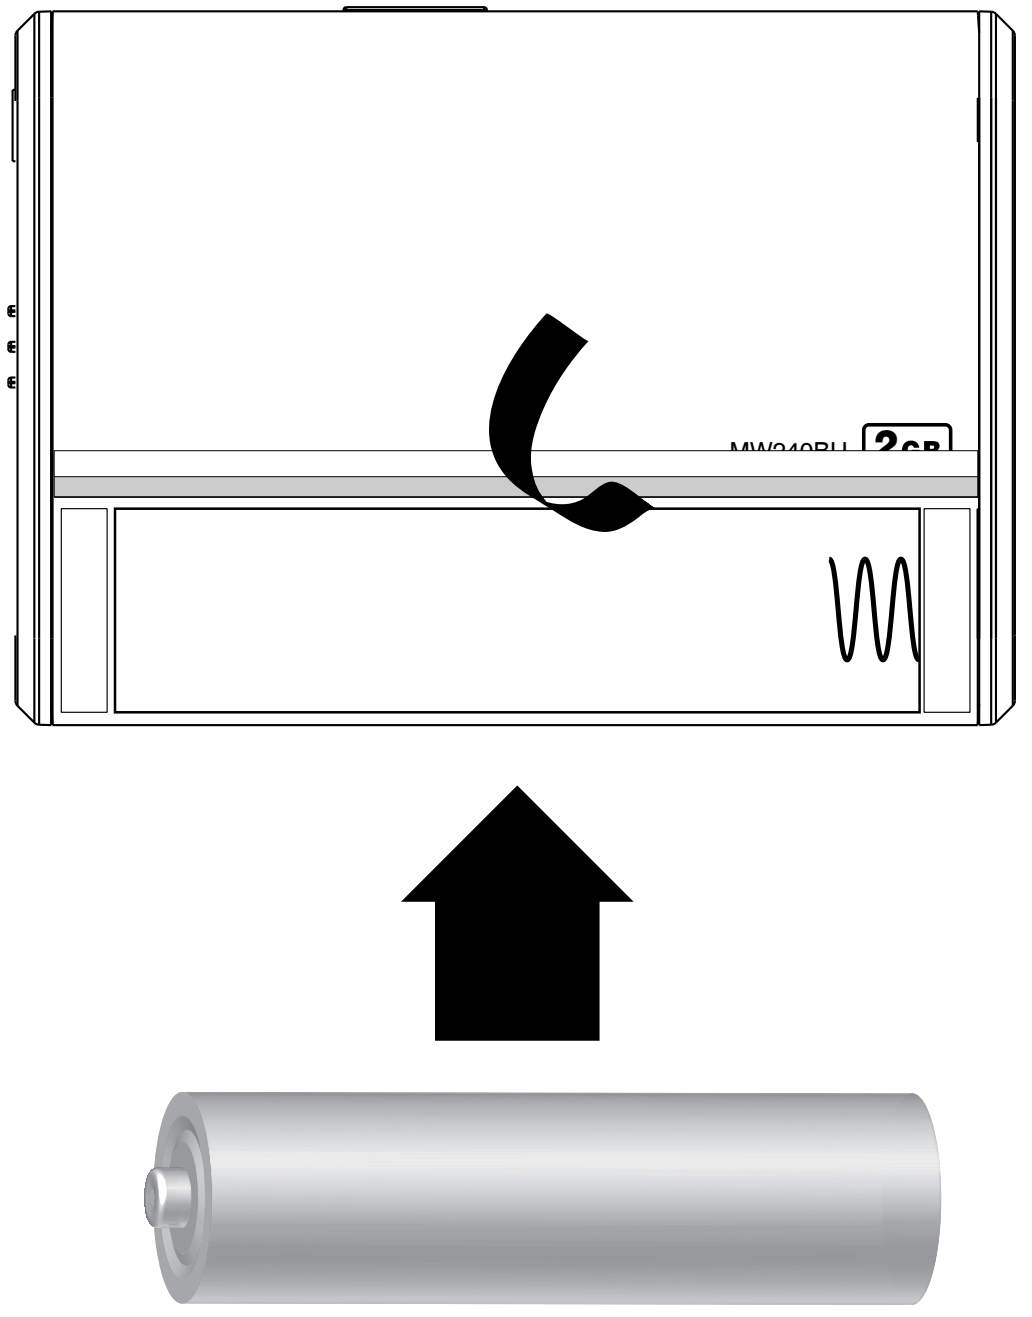

LOADING MUSIC

Requires Windows XP, Windows Vista, or Windows 7.

1 Connect the MP3 player to a computer using the included USB cable.

2 If prompted, select “OPEN FOLDER TO VIEW FILES USING WINDOWS EXPLORER”. Otherwise, go to MY COMPUTER and click on the drive named GPX.

3 To load music onto the MP3 player, simplay drag the MP3 or WMA files into the opened folder, GPX.

- Media can also be synced to the MP3 player by using Windows Media Player, version 10 or above. For information on syncing a device with Windows Media Player, open Windows Media Player, and go to the help page.

PLAYING MUSIC

1 Follow the instructions for LOADING MUSIC.

2 Adjust the **ON**/**OFF**/**HOLD** switch to the ON position.

3 Connect a set of earbuds or headphones to the **STEREO HEADPHONE JACK.**

4 Press the **PLAY**/**PAUSE** button to begin playing audio from the MP3 player.

PRESET EQ

1 While playing music, press and hold the **MODE** button to switch between the preset equalizer modes; Normal, Pop, Rock, Classic, Jazz, and Bass.

PLAY MODES

1 While playing music, press the **MODE** button to switch between NORMAL, REPEAT 1, REPEAT ALL, and RANDOM play modes.

SEARCHING FOR MUSIC

1 While playing music, press the **PLAY**/**PAUSE** button to pause the MP3 player.

2 Press and hold the **MODE** button to access the SEARCH feature.

3 Press the **MODE** button repeatedly to switch between searching for SONG, ARTIST, or ALBUM.

4 Press the **PLAY**/**PAUSE** button.

5 Press the **SKIP**/**SEARCH** buttons to change the characters, and press the **MODE** button to select the chosen character.

6 Repeat step 5 until the SONG, ARTIST, or ALBUM you are searching for has been completely spelled out.

7 Press the **PLAY**/**PAUSE** button.

MW240S/MW240P/MW240BU/MW240B/MW240PR

Digital Audio Player

USER'S GUIDE V:1657-0809-10